# **User Manual**

# For



# Pradhan Mantri Gram Sadak Yojana (PMGSY)



Odisha Space Applications Centre (ORSAC)
Dept. of Science & Technology, Govt. of Odisha
www.orsac.gov.in

October, 2023

# **Table of Contents**

Android Application:	3
1. Login:	4
2. Forgot Password:	5
3. Dashboard:	6
4. Work List	6
5. Vehicle List	8
6. Road List	9
7. Road Survey	10
8. Sync Offline Road	10
9. Map	11
10. History Playback	12
11. Profile	13
12. Logout	14
Web Application:	15
1. Login:	16
2. Forgot Password:	16
3. Dashboard	17
4.User Master	17
4.1 Add User 4.2 View User	18 18
5.Contractor Master	19
5.1 Add Contractor	19
5.2 View Contractor:	19
6. Vehicle Master	20
6.1 Add Vehicle 6.2 View Vehicle	20 20
9. Vendor Master	23
9.1 Add Vendor	23
9.2: View vendor	23
10. Device Master 10.1 Add Device	<b>24</b> 24
10.2 View device	25
11. Package Master	27
12. Road Master	28

13. Roll Menu	30
14. Designation Master	30
14.1 Add Designation	30
14.2 View Designation	31
15. Map	31
15.1 History Playback	32
16. Report	32
16.1 Vehicle Alert	32
17. Logout	34

## **Android Application:**

The Android application is named as PMGSY VTS and present in Google Play Store under the link <a href="https://play.google.com/store/apps/details?id=gov.orsac.rdvts">https://play.google.com/store/apps/details?id=gov.orsac.rdvts</a>. The Application is now designed to seamlessly monitor and optimize the movement of its vehicles, ensuring efficient operations, improved safety, and substantial cost savings.


The Application has the current modules as below:

- 1. Login
- 2. Forgot Password
- 3. Dashboard
- 4. Work List
- 5. Vehicle List
- 6. Road List
- 7. Road Survey
- 8. Sync Offline Road
- 9. Map
- 10. History Playback
- 11. Profile
- 12. Logout

The details of the modules are mentioned below


## 1. Login:

- Users can login into the application using a mobile number and password which is registered into the system by the admin.
- Users can change the password by clicking on "Forgot Your Password".

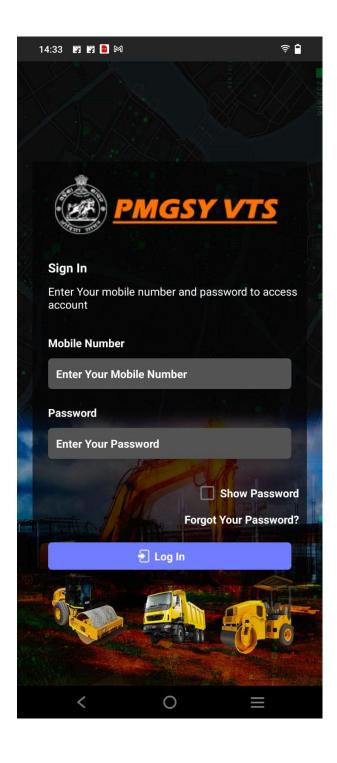

## 2. Forgot Password:


- After click on the Forgot Password button and the page opens up with the option to enter their registered Mobile Number.
- Users can enter the registered mobile number and click on Request OTP button to get the OTP on respective mobile number.
- After entering an OTP would be sent to their mobile which can be used to reset the password with a new password.

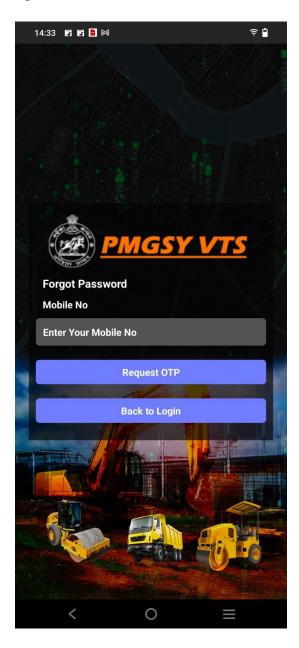

#### 3. Dashboard:

- After login, in the Dashboard, users can see No. of Active Vehicle, No. of In-Active Vehicle, No. of Works Completed, No. of Works In-Completed.
- Users can see District wise active vehicle status and Division wise vehicle status in Dashboard.


• All the options in the application are present at the top left three-line menu.

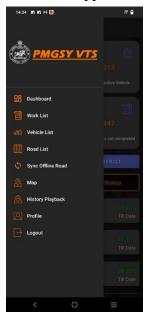




#### 4. Work List


- In this section, Users can see the list of ongoing works and work details.
- User can search a work using filter work. Users can search a work by Work, and work status in the filter section.
- Users can see Work Information, Activity Details, Work VTU Details, Road Details, Contractor Details, Vehicle Details and Work Alert Details in the "View Details".
- User can edit the work details and status in the Edit Work section.

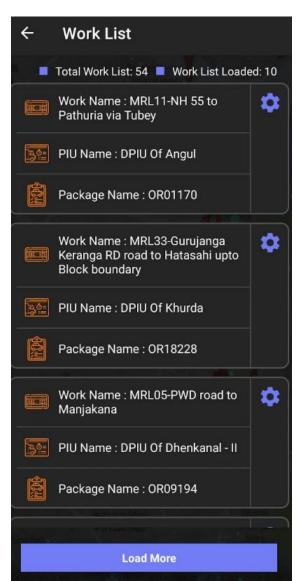


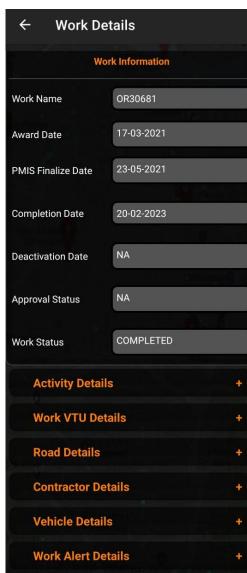

#### 5. Vehicle List


- In this section, Users can see all the vehicles and vehicle details.
- User can search a road using filter road. Users can search a road by Road Name, Work, and Contractor in the filter section.
- Users can see vehicle details, assigned vehicle details, current package details, current activity details, device history, activity history, vehicle alert details in the "View Details".

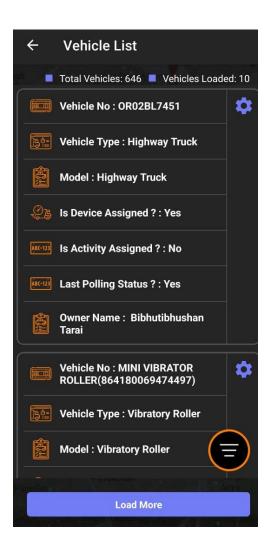


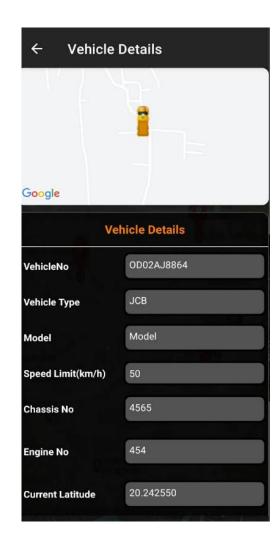

#### 6. Road List


- In this section, users can see all the roads and road details.
- User can search a road using filter road. Users can search a road by Road Name, Work, and Contractor in the filter section.
- Users can see road detail, work details and alert information in the "View Details".
- Users can also add the road location in this section.

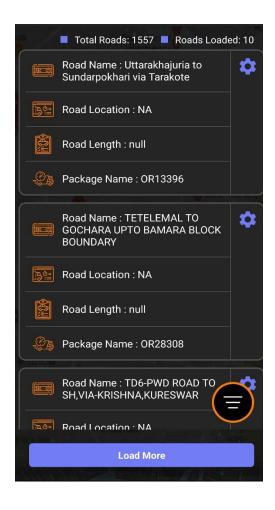


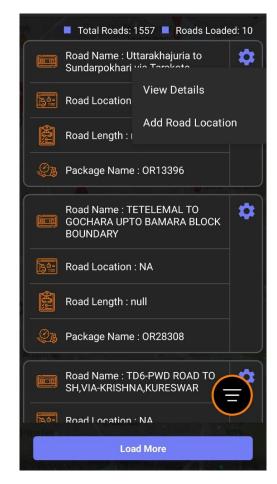

### 7. Road Survey

- Users can click on the "Add Road location" to add and survey the location of a road.
- While survey, users can click on "Start Survey" on the starting point of the road and click on "End Survey" on the ending point of road to complete the survey.
- Users can do the road survey in offline mode also.

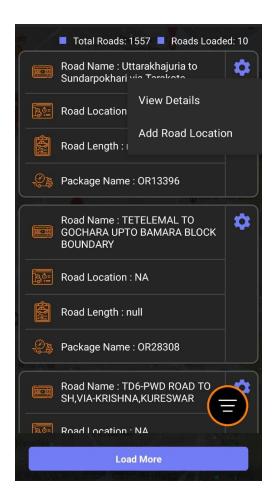

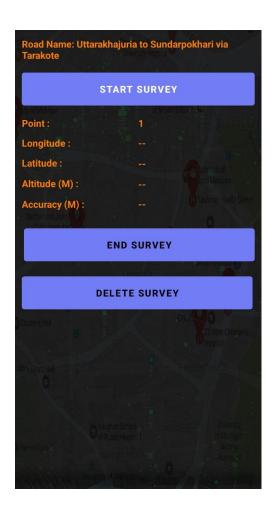

## 8. Sync Offline Road

In this section, users can sync the offline road survey data when the internet connection is available.


## **9.** Map

- In this session, a map view of vehicles is available. In the map, user can track the vehicles.
- Users can choose both the satellite view and road view on the map.
- Administrative-wise wise search filter is available. Users can choose a particular area and can see and track all the vehicles available in that area.




## 10. History Playback

- In this section, the user can see the history of a vehicle movement.
- User need to choose a particular vehicle from "select vehicle" drop down, then select START DATE and END DATE.
- User can click on the show track and show road options to see the track and road on map.
- Then click on the SEARCH button to see the history playback of the vehicle.

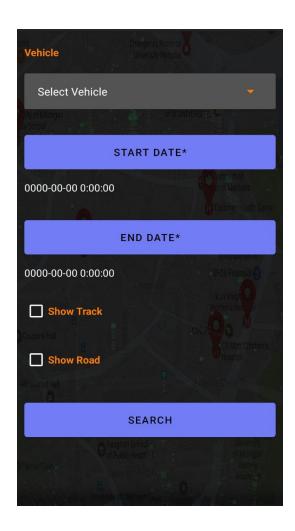

## 11. Profile

- In this section, users can see the profile details.
- Users can change their password by clicking on the "Change Password" button.

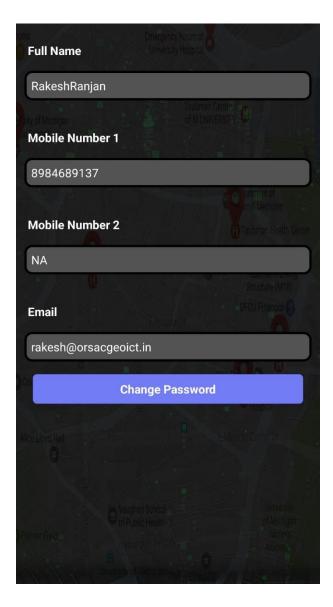

## 12. Logout

• Users can quit from the application by click on the logout option.



All data surveyed are viewed at <a href="https://rdvts.orsacvts.in/login.html">https://rdvts.orsacvts.in/login.html</a> website with the same login credentials for the users.

## **Web Application:**

The web application for PMGSY VTS is available on the public domain on the link <a href="https://rdvts.orsacvts.in/login.html">https://rdvts.orsacvts.in/login.html</a>.

The web application has the following options/ modules as below

- 1. Login
- 2. Forget Password
- 3. Dashboard
- 4. User Master
  - a. Add User
  - b. View User
- 5. Contractor Master
  - a. Add Contractor
  - b. View Contractor
- 6. vehicle Master
  - a. Add Vehicle
  - b. View Vehicle
- 7. Device Master
  - a. Add Device
  - b. View Device
- 8. Package Master
- 9. Role Menu
- 10. Designation Master
  - a. Add Designation
  - b. View Designation
- 11. Map
- 12. Report

The details of which are mentioned below


## 1. Login:

- Users can login into the application using a mobile number and password which is registered into the system by the admin.
- Users can change the password by clicking on "Forgot Your Password".




## 2. Forgot Password:

- After click on the Forgot Password button and the page opens up with the option to enter their registered Mobile Number.
- Users can enter the registered mobile number and click on Request OTP button to get the OTP on respective mobile number.
- After entering an OTP would be sent to their mobile which can be used to reset the password with a new password.

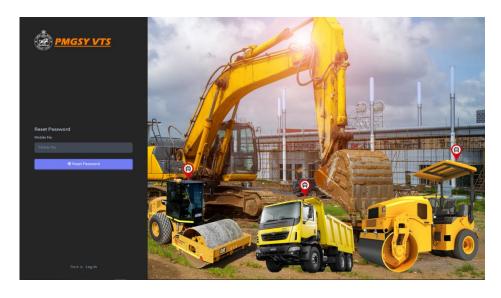

#### 3. Dashboard

- After login, in the Dashboard, users can see No. of Active Vehicle, No. of In-Active Vehicle, No. of Works Completed, No. of Works In-Completed.
- Users can see District wise active vehicle status and Division wise vehicle status in Dashboard.
- Users can Package Analysis of Request Quantity and Executed Quantity of activities.
- Users can select a PIU and a Package and then the activity analysis for the same.

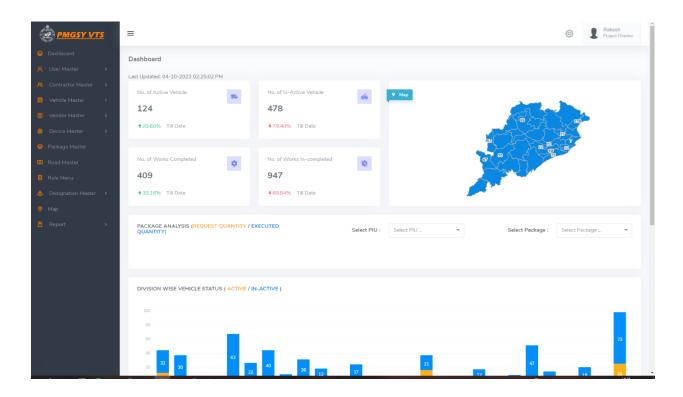


#### 4.User Master

• In User Master section, Add User and View User options available.


#### 4.1 Add User

• In Add User section, Users having admin privileges can add a user by giving user details and click on the save button.

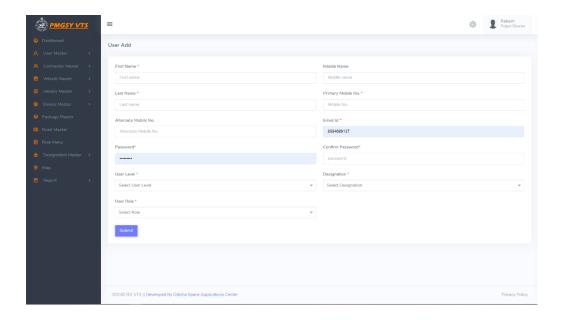

#### 4.2 View User

- In this section, users can see all the users and user details.
- Users can search a user using search filter.

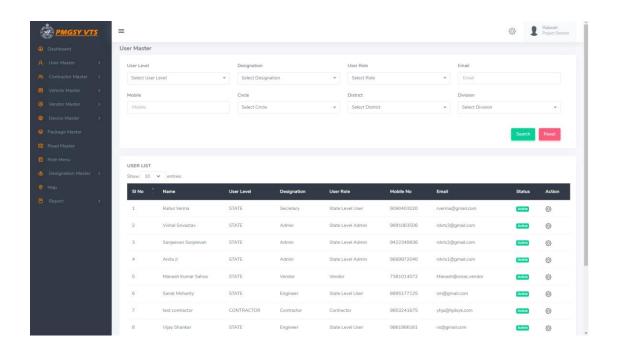


### **5.Contractor Master**

• In User Master section, Add contractor and View contractor options available.


#### **5.1 Add Contractor**

• In this section, users can add a contractor by giving required contractor details.

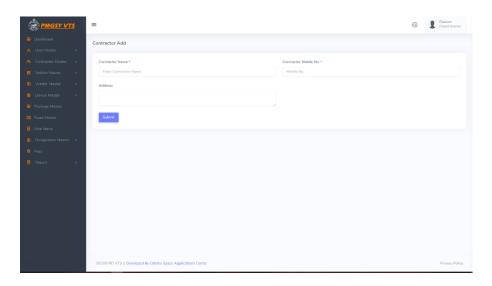

#### **5.2 View Contractor:**

- In this section, users can see all contractor and contractor details.
- Users can search a contractor using search filter.

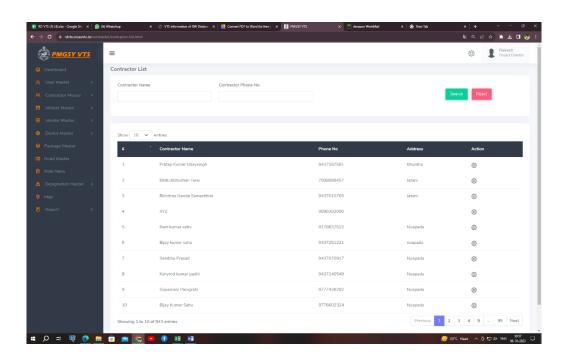


#### 6. Vehicle Master

• In Vehicle Master section, Add vehicle and View vehicle options are available.


#### 6.1 Add Vehicle

- In this section, users can add a vehicle by giving the required vehicle details.
- Users can also select a device and assign the device to the vehicle.
- Users can also select a package and activity and assign the vehicle to an activity.

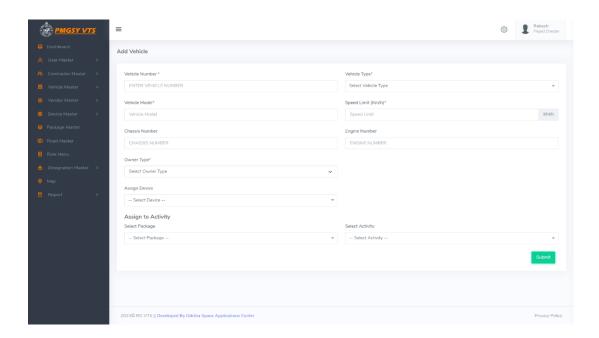


#### **6.2** View Vehicle


- In this section, users can see a list of all active and in-active vehicles.
- Users can see device assign status, activity assign status and last polling status of vehicles in the list.
- Users can search a vehicle by vehicle type, vehicle number, device, owner, and status in search filter section.
- Users can edit vehicle details by clicking on edit in action section.

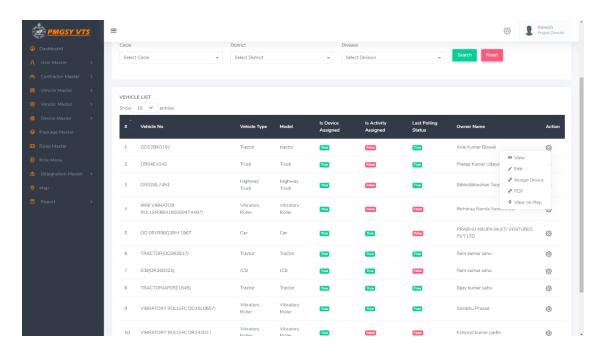


• Users can see vehicle details, assigned vehicle details, current package details, current activity details, device history, activity history, vehicle alert details in the "View Details".

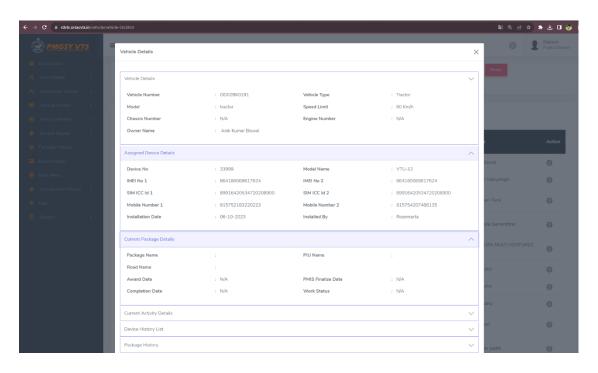


• Users can assign and un assign a device by click on assign device in action section.

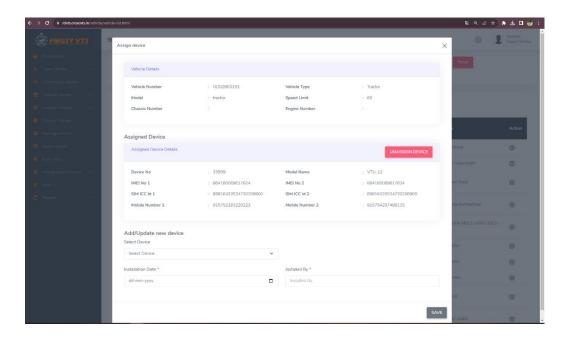

• Users can click on PDF in action section to view and download a pdf of vehicle details, assigned vehicle details, current activity details, device history, activity history.

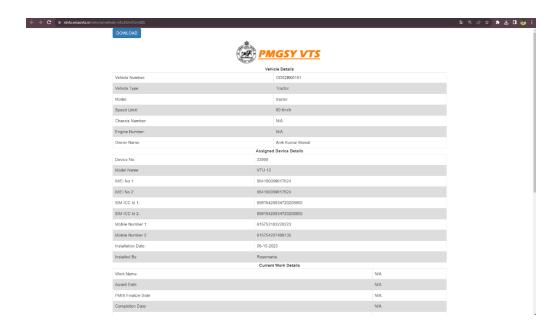

- Users can click on view on map in action section to view the vehicle on map.
- In this section, users can view and track the vehicle.
- Users can choose base map view as required.

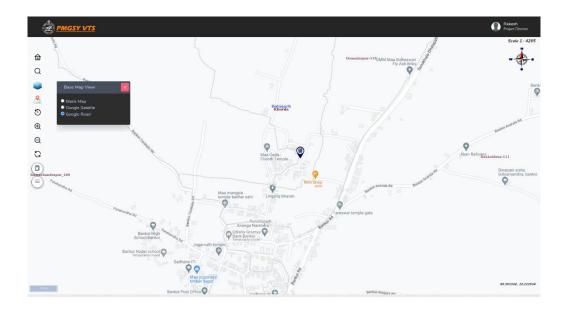


## 9. Vendor Master

• In Vendor Master section, Add vendor and View vendor options are available.


### 9.1 Add Vendor

• Users can add a vendor by giving required vendor details data.

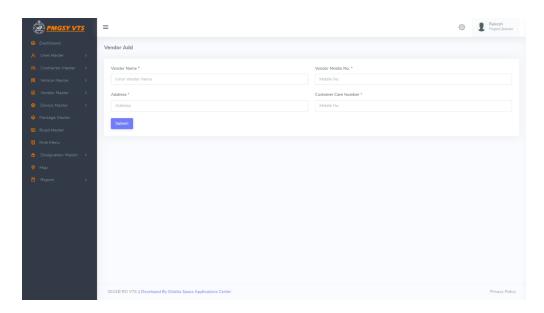

#### 9.2: View vendor

- In this section, users can see a list of all vendors.
- Users can view and edit vendor details by click on view and edit option in action section.

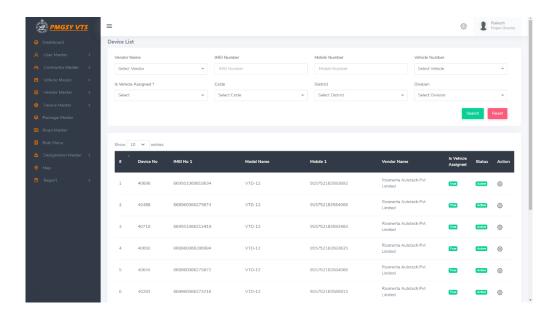


### 10. Device Master

• In Device Master section, add device and view device options are available.


#### 10.1 Add Device

- In this section, users can add a device by giving required device information.
- Users can also assign a vehicle to the device.

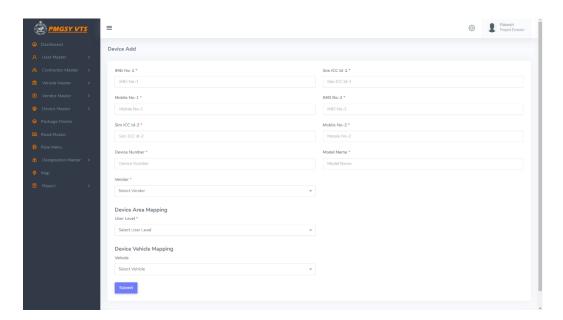


#### 10.2 View device

- In this section, users can see a list of all active and in active devices.
- Users can search a device by vendor name, IMEI number, vehicle number, is vehicle assigned, circle, district, division in search filter.

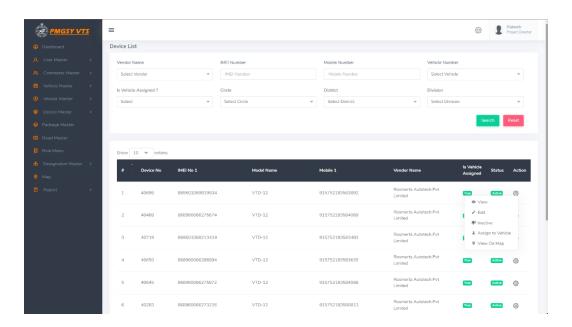


• Users can click on edit option in action and edit device information.

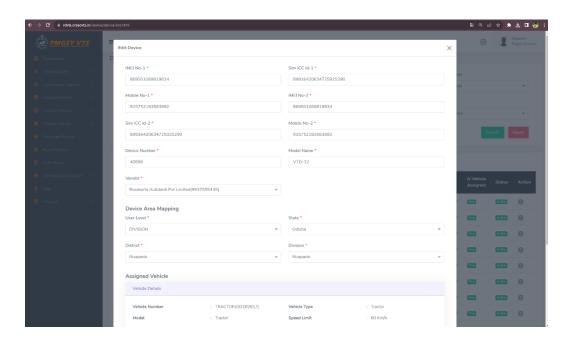


• Users can click on inactive/active in action and change the status.

• Users can click on Assign to vehicle option in action, and assign and un assign the device to a vehicle.

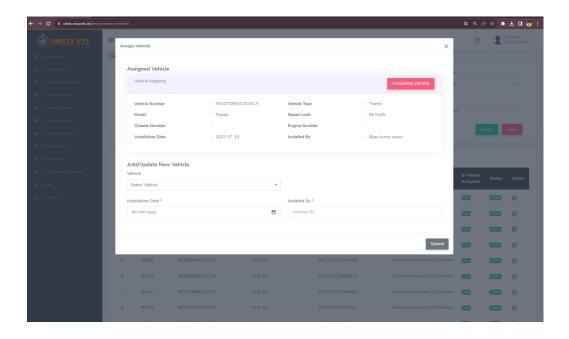


- Users can click on view on map in action section to view the vehicle on map.
- In this section, users can view and track the vehicle.
- Users can choose base map view as required.

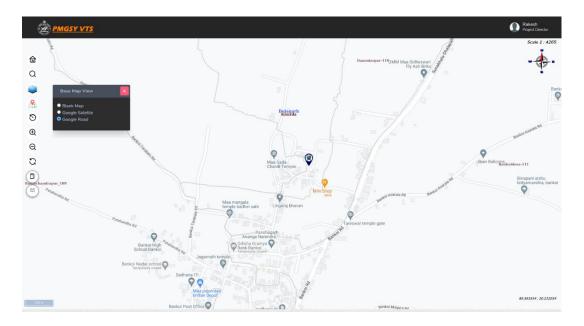


### 11. Package Master

- In this section, users can view a list of all packages with road name, PIU name, and work progress status.
- User can see in the package master there will be a "Road Name, PIU Name, Package Name, Status.

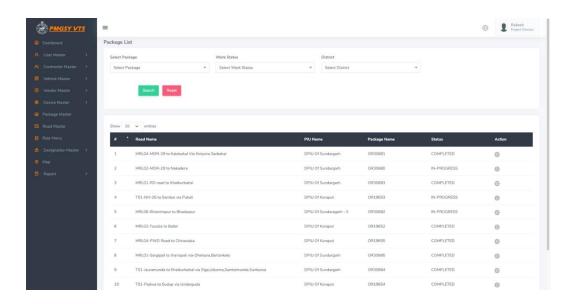


• Users can click on view in action button to view package details with corresponding assigned activities, VTU details, contractor details, vehicle details, work alert details.

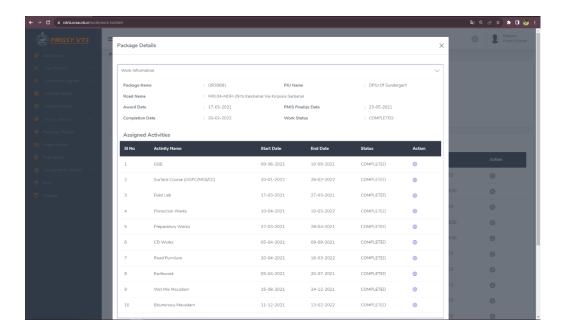


### 12. Road Master


- In this section, users can see a list of all roads with road name, road length, package.
- Users can search a road by road name, package and district in search filter.

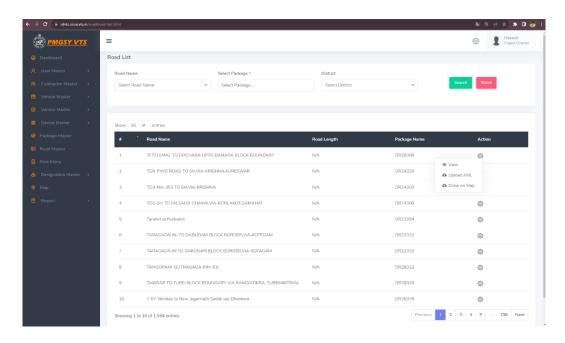


• Users can click on view on action button and view road details and road alert details.

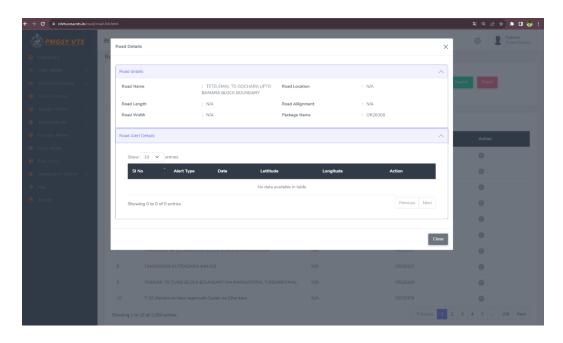

• Users can click on upload KML on action button and upload a KML file of the road.

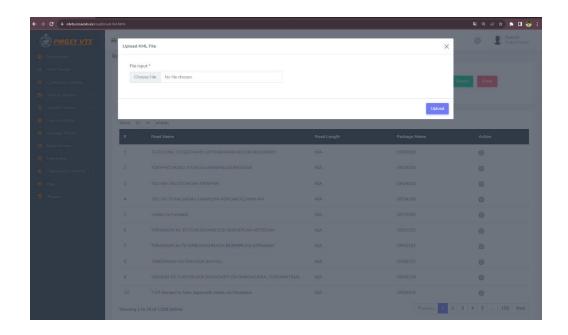

• Users can click on draw on map on action button and draw the road in map section.

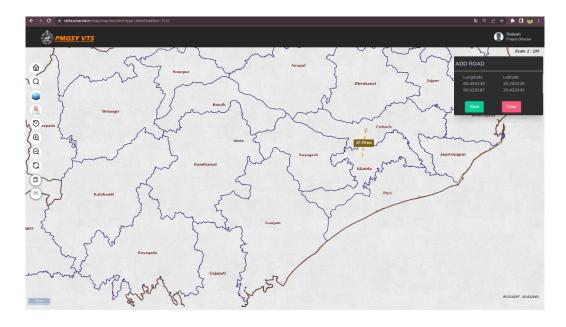

## 13. Roll Menu

• Users with admin access can give permission to a role to view menus.




## 14. Designation Master

• In Designation master section, add designation and view designation options are available.


### 14.1 Add Designation

• In this section, users can add designation.

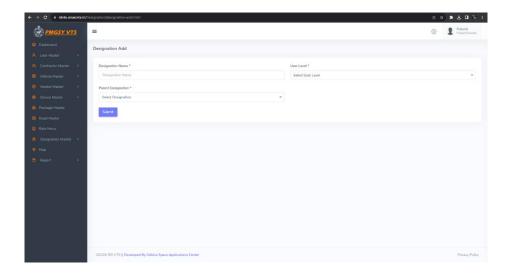


## 14.2 View Designation

- In this section, users can view a list of all designations.
- Users can view and edit designation details.

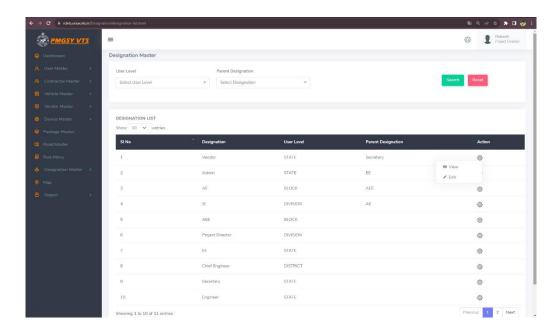


## 15. Map

- In this section, users can see all active and in-active vehicles on map.
- Users can search a vehicle by administrative name, activity name and vehicle no using search filter.

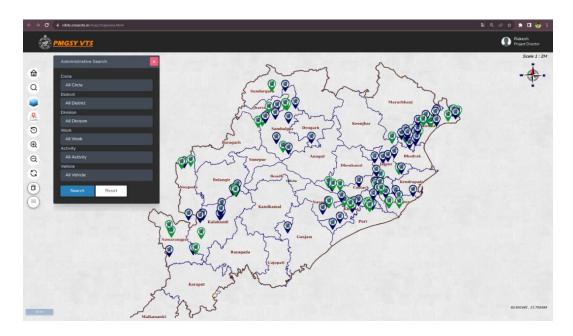

#### 15.1 History Playback

- In this section, the user can see the history of a vehicle movement.
- User need to choose a particular vehicle from "select vehicle" drop down, then select START DATE and END DATE.
- User can click on the show track and show road options to see the track and road on map.
- Then click on the SEARCH button to see the history playback of the vehicle.

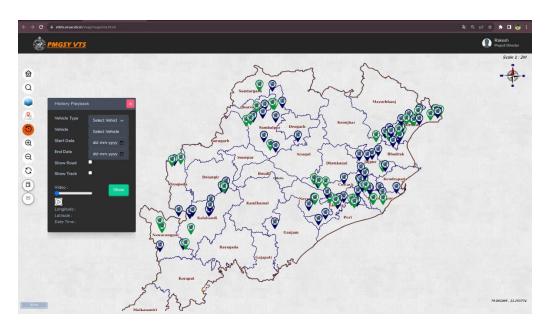



## 16. Report


• In this section reports are available.

#### 16.1 Vehicle Alert

- In this section, users can view vehicle alert report.
- Users can generate report by alert type, vehicle, package using search filter.
- Users can generate both vehicle alert report against a vehicle and against a package.
- Users can click on search by in filter section and can choose vehicle or package as required.

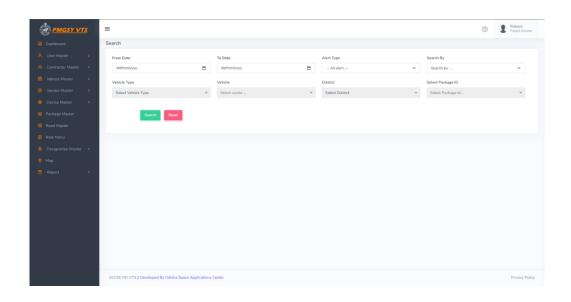

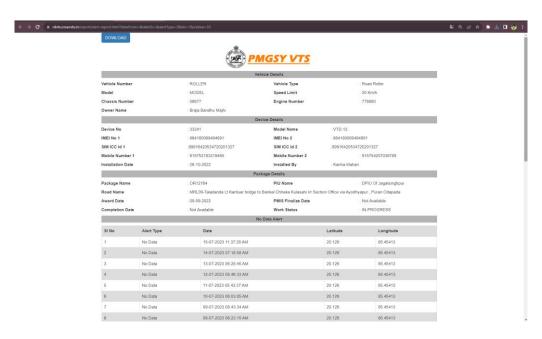

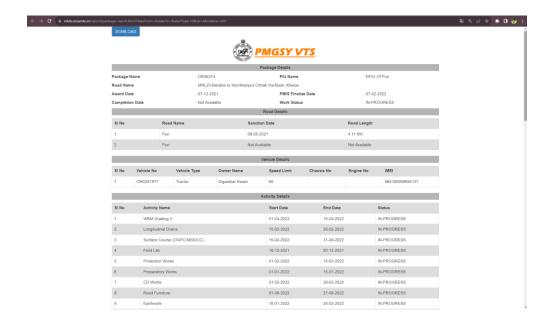

## 17. Logout

• Users can quit from the application by click on the logout option.

